



Loving music

Important Safety Instructions



1. General Information

- Read these instructions and keep them for future reference. Follow all instructions carefully.
- Not suitable for children under 6 years of age!
The packaging may contain small parts that could be swallowed. Risk of suffocation from plastic and small parts. Keep plastic bags, straps, etc., away from children as they pose a suffocation hazard.
Children can strangle themselves with cables. Keep cables out of reach of children.
- Before using the device, check for any visible damage. If the device is damaged, do not connect it to the power supply! Repair or maintenance is required if there is any damage. For example, if the power cable or plug is damaged, liquid or objects have entered the device, the device has been exposed to rain or moisture, is no longer functioning properly, or has been dropped. Contact your dealer to have the device checked.
- If batteries (including battery packs or replaceable dry batteries) are used, do not expose them to direct sunlight, fire, or excessive heat.

2. Intended Use

The Professional Power 12V / 24V is a power supply designed for operating a **Clearaudio** 12V / 24V turntable. The intended use of the Professional Power 12V / 24V is in accordance with the information provided in the user manual.

The power supply should only be used with the maximum allowable connection values as per the technical specifications. Any other use or modification of the power supply is not in accordance with its intended purpose.

3. Placement

- Avoid placing the device in areas with direct sunlight, temperature fluctuations, or high humidity. Also, do not place electrical devices near heaters, heat lamps, or other devices that produce heat. The device is intended for operation in heated rooms. The device should only be placed on level surfaces.
- Never block the ventilation slots or cover the device with a cloth or similar materials. No objects should be placed on the device.
- Installation in closed shelving units or similar furniture is not allowed.
- Choose a location near a wall outlet so that the power plug is always accessible.
- Electrical devices should never be operated near water.



Loving music

Important Safety Instructions

4. Connection

- Never bypass the safety features of a polarized or grounded plug. Polarized plugs have two power contacts, one of which is wider than the other. Grounded plugs (protective contact plugs) have two power contacts and a third grounding contact. Both plug types are designed for safety. If the existing plug does not fit the socket, have the plug replaced by an electrician.
- Pay special attention to the power cable, plug, socket, and cable outlet/connection areas to ensure that the cable cannot be stepped on or pinched. It is also recommended to regularly inspect the cable for any signs of damage to the insulation. If the cable is damaged, have it replaced by a professional immediately!
- A small amount of standby power is drawn from the network, even when the Power or Standby/On switch is in the off position.
- Never pull on the power cable to disconnect the device from the outlet. Always pull directly on the plug!

5. Maintenance

- If the device is not used for an extended period, it is recommended to disconnect the power supply from the electrical outlet.
- To clean the device, use only a soft cloth with a smooth surface or a soft brush. Never use aggressive cleaning agents.
- Electrical devices contain magnetic storage devices. External magnets near these devices can interfere with their magnetic components and potentially damage them.

6. Health Warnings

- Prolonged exposure to high volume levels can cause hearing damage. Handle high volume levels responsibly!
- Heat development: Be cautious when touching the device – the casing may become warm during operation.
- There is a risk of injury during assembly due to heavy components, such as pinching of fingers.
- Risk of injury from sharp objects.

7. Disclaimer of Liability:

Use only accessories approved by the manufacturer.

Warranty claims will be void if damage is caused by failure to follow the instructions in the manual. The manufacturer assumes no liability for consequential damages.

Liability Disclaimer:

Clearaudio assumes no liability for damage to records caused by improper handling!



Loving music

Important Safety Instructions

8. Service

Do not open the casing to expose the internal electronics, as there are no components inside the device that require user maintenance. Doing so may also void the warranty. All repairs and maintenance should be carried out by qualified personnel.

The Professional Power 12V / 24V may only be repaired by the manufacturer during the warranty period; otherwise, the warranty will be void. The service for all **Clearaudio** products should only be performed by an authorized dealer. If service is required despite the high manufacturing standards, the **Clearaudio** product must be sent to **Clearaudio** through your dealer.

If any malfunctions occur, contact the dealer from whom you purchased the device. Only use the product again after the repair has been carried out.

9. Transport

When transporting the **Clearaudio** Professional Power 12V / 24V, always use the original packaging. Ensure that the device is packed exactly as it was delivered. Only when packed in the original packaging can safe transportation be guaranteed. Pack the device in reverse order from assembly and setup as described.

Clearaudio assumes no liability for transport damage caused by improper packing.

10. CE Compliance

This product complies with the requirements of European directives and other applicable regulations.



11. Disposal

For customers in Europe: Disposal of electrical and electronic waste, as well as batteries and accumulators.



a) If a product, packaging, and/or accompanying documentation is marked with the symbol of a crossed-out trash bin, the product is subject to European directives and national laws implementing these directives.

b) These directives and laws require that electrical and electronic waste, as well as batteries and accumulators, must not be disposed of with regular household waste. Proper disposal, recovery, and recycling must be ensured, and you are obligated to dispose of old devices and discharged batteries/accumulators at designated collection points.

c) Proper disposal contributes to conserving valuable resources and prevents potential harmful effects on public health and the environment that may result from improper disposal. Disposal is free of charge.

d) For more information on the recycling and recovery of old devices, batteries, and accumulators, contact your local municipality, the waste disposal company, or the point of sale where you purchased the product.