



Loving music

Important Safety Instructions



1. General Information

- Read and retain these instructions. Follow all guidelines.
- Not suitable for children under 6 years! The package may contain small parts that can be swallowed.
Risk of suffocation from plastic films and small parts. Keep films, bags, straps, etc., away from children to prevent suffocation.
Children may strangle themselves with cables. Store cables out of children's reach.
- Inspect the device for damage before operation. If the device is damaged, do not connect it to the power supply! Repairs or maintenance are required if any damage is present, such as a damaged power cord or plug, liquid or objects inside the device, exposure to rain or moisture, improper functioning, or if the device has been dropped. Contact your dealer for inspection.

2. Intended Use

A record-cleaning machine is designed for cleaning vinyl records.

The intended use of the record-cleaning machine is operation in accordance with the information provided in the user manual.

The power supply must only be operated with the maximum permissible connection values as specified in the technical data. Any other use or modification of the power supply is not permitted.

3. Placement

- Avoid locations with direct sunlight, temperature fluctuations, or high humidity.
- Do not place the device near heaters, heat lamps, or other heat-generating equipment. The device is designed for use in heated indoor spaces and should only be placed on level surfaces.
- Never block ventilation slots or cover the device with a cloth or similar material. Do not place objects on the device.
- Installation in enclosed shelving or similar furniture is not allowed.
- Choose an operating location near a wall outlet so the power plug is always accessible.
- Never operate electrical devices near water.

4. Connection

- Never bypass the safety features of a polarized or grounded plug. Polarized plugs have two blades, one wider than the other. Grounded plugs (with an earth pin) have two blades and a third grounding pin. Both types provide safety. If the plug does not fit into your outlet, consult an electrician to replace the outlet.
- Ensure that the power cord is not stepped on or pinched, especially near plugs, outlets, and the point where it exits the device. Regularly inspect the cord for damage to its insulation for your safety. Replace damaged cords immediately with professional assistance.
- A small standby current is drawn even when the power or standby/on switch is not in the "on" position.
- Never pull the power cord to unplug the device; always pull the plug directly.



Loving music

Important Safety Instructions

5. Maintenance

- Never use aggressive cleaning agents.
- Do not use dry cloths for cleaning, as this may cause electrostatic buildup.
- Always use a damp cloth for cleaning.
- If the device will not be used for an extended period, disconnect the power supply from the electrical outlet.
- Electrical devices contain magnetic storage components. External magnets can disrupt and damage the magnetic components of the device.

6. Health Warnings

- Prolonged exposure to high volumes can cause hearing damage. Use high volumes responsibly.
- Heat Generation: Be cautious when touching the device; the housing may become warm during operation.
- Risk of injury from heavy components during setup.
- Risk of injury from sharp objects.
- Cleaning Solutions:

Eyes: This product may irritate the eyes. In case of eye contact, rinse immediately with clear water.

Skin: Prolonged contact may cause skin irritation.

Respiratory System: May cause bronchial irritation. Use only in well-ventilated areas

Ingestion: This product has not been tested for ingestion hazards. Do not drink!

Keep out of reach of children.

7. Disclaimer of Liability:

Use only accessories approved by the manufacturer.

Warranty claims will be void if damage is caused by failure to follow the instructions in the manual. The manufacturer assumes no liability for consequential damages.

Liability Disclaimer:

Clearaudio assumes no liability for damage to sound carriers caused by improper handling!

8. Service

- Do not open the housing to access internal electronics, as there are no user-serviceable parts inside. Opening the device may void the warranty. All repairs and maintenance should be performed by qualified personnel.
- The record-cleaning machine may only be repaired by the manufacturer during the warranty period; otherwise, the warranty is void.
Service for all **Clearaudio** products should only be conducted through authorized dealers. If service is required despite high manufacturing standards, send the **Clearaudio** product to **Clearaudio** through your authorized dealer.
- In case of malfunctions, contact the dealer where you purchased the device. Do not use the product until repairs are completed.



Loving music

Important Safety Instructions



WARNING:
Never use foaming, caustic liquids or water.
This may cause severe damage to your machine and void the warranty.

9. Transport

Always use the original packaging when transporting the **Clearaudio** record-cleaning machine. Pack the device in the same way it was delivered. Proper packaging ensures safe transport. Follow the reverse order of setup and commissioning for packing.

Ensure correct and secure packaging (use the original packaging).

Also, make sure both tanks (supply tank and liquid waste tank) are emptied before packing the machine.

Clearaudio assumes no liability for transport damage caused by improper packing.

10. CE Compliance

This product complies with the requirements of European directives and other applicable regulations.



11. Disposal

For customers in Europe:

Disposal of electrical and electronic waste, as well as batteries and accumulators.



a) If a product, packaging, and/or accompanying documentation is marked with the symbol of a crossed-out trash bin, the product is subject to European directives and national laws implementing these directives.

b) These directives and laws require that electrical and electronic waste, as well as batteries and accumulators, must not be disposed of with regular household waste. Proper disposal, recovery, and recycling must be ensured, and you are obligated to dispose of old devices and discharged batteries/accumulators at designated collection points.

c) Proper disposal contributes to conserving valuable resources and prevents potential harmful effects on public health and the environment that may result from improper disposal. Disposal is free of charge.

d) For more information on the recycling and recovery of old devices, batteries, and accumulators, contact your local municipality, the waste disposal company, or the point of sale where you purchased the product.