



Loving music

Important Safety Instructions



1. General Information

- Read these instructions and keep them for future reference. Follow all instructions carefully.
- Not suitable for children under 6 years!
- The product may contain small parts that could be swallowed. Risk of suffocation from plastic films and small parts. Keep plastic films, bags, straps, etc., out of reach of children, as they pose a suffocation hazard.
Children may strangle themselves with cables. Keep cables out of reach of children.
- Inspect the device for damage before use. If the device is damaged, do not connect it to the power supply! Repairs or maintenance are required if any damage is detected, such as to the power cable or plug, if liquid or objects have entered the device, if it has been exposed to rain or moisture, is not functioning properly, or has been dropped. Contact your retailer for inspection.
- Manual Operation Required: The turntable does not have an automatic stop function. Once the run-out groove is reached, lift the tonearm from the record using the manual lift and turn off the turntable manually.
- **Specific Instructions for Clearaudio Concept Signature and Celebrity "Al Di Meola" Models:**
Restart: If the device becomes unresponsive, restore normal operation by turning it off and on again using the power switch on the back.

2. Intended Use

A turntable is designed for playing vinyl records. Intended use requires compliance with the operating instructions provided.

The power supply must be used only within its specified technical parameters. Any other use or modification of the power supply is considered improper.

3. Placement

- Avoid locations with direct sunlight, temperature fluctuations, or high humidity. Do not place the device near heaters, heat lamps, or other devices that generate heat. The turntable is intended for use in heated rooms and should only be placed on flat surfaces.
- Never block ventilation slots or cover the device with fabric or similar materials. Do not place objects on top of the device.
- Installing the device in closed cabinets or similar furniture is not permitted.
- Choose a location near a wall outlet to ensure the plug is always easily accessible.
- Never operate electrical devices near water.

4. Connection

- Never bypass the safety features of polarized or grounded plugs. Polarized plugs have two blades, one wider than the other. Grounded plugs have two blades and a third grounding prong. These features are designed for safety. If your outlet is incompatible with the plug, consult an electrician to replace the outlet.
- Ensure that cables are not stepped on, pinched, or subjected to strain near plugs, outlets, or where they exit the device. Regularly inspect cables for damage to their insulation. Replace damaged cables immediately with professional assistance.



Loving music

Important Safety Instructions

- A small standby current is drawn even when the power or standby/on switch is in the “off” position.
- Always unplug the device by pulling the plug, not the cord.

5. Maintenance

- Disconnect the power supply from the mains if the device will not be used for an extended period.
- Use only specialized acrylic glass cleaners for cleaning acrylic parts. Never use alcohol-based liquids (e.g., ethanol or spirits) to avoid surface damage. Avoid aggressive cleaning agents. Do not use dry cloths, as they can cause static buildup. Suitable cleaning and care products from Clearaudio are available at www.analogshop.de or from authorized retailers. Lubricate the turntable bearing approximately every two years with the included bearing oil, using 1-2 drops in the bearing housing.
- Electrical devices contain magnetic storage components. Avoid placing external magnets near the device to prevent damage to magnetic components.

6. Health Warnings

- Prolonged exposure to high volume levels can cause hearing damage. Use high volumes responsibly.
- Heat Development: Exercise caution when touching the device, as the housing may become warm during operation.
- Risk of injury during setup due to heavy components (e.g., pinching fingers while placing the turntable platter).
- Beware of sharp objects that could cause injury.

7. Disclaimer of Liability:

Use only accessories approved by the manufacturer.

Warranty claims will be void if damage is caused by failure to follow the instructions in the manual. The manufacturer assumes no liability for consequential damages.

Liability Disclaimer:

Clearaudio assumes no liability for damage to sound carriers caused by improper handling!

8. Service

- Do not open the device housing to access internal electronics, as it contains no user-serviceable components. This action may void the warranty. Repairs should only be performed by qualified personnel.
- During the warranty period, repairs may only be carried out by the manufacturer. Otherwise, the warranty will be void.
- Service for all Clearaudio products should be conducted exclusively through authorized dealers. If service is needed, return the product to Clearaudio via your retailer.
- In case of malfunctions, contact the retailer where the device was purchased. Do not use the product until it has been repaired.



Loving music

Important Safety Instructions

9. Transport

Always use the original packaging when transporting the Clearaudio turntable. Pack the device as it was delivered to ensure safe transport. When packing, reverse the setup process as described in the setup and operation instructions.

- Secure the turntable platter and tonearm with adhesive tape for transport.
- Ensure that the platter is packed with the milled side facing up in the bottom packaging layer and that the feet are screwed back into place.

Clearaudio assumes no liability for transport damage caused by improper packing.

10. CE Compliance

This product complies with the requirements of European directives and other applicable regulations.



11. Disposal

For customers in Europe:

Disposal of electrical and electronic waste, as well as batteries and accumulators.



a) If a product, packaging, and/or accompanying documentation is marked with the symbol of a crossed-out trash bin, the product is subject to European directives and national laws implementing these directives.

b) These directives and laws require that electrical and electronic waste, as well as batteries and accumulators, must not be disposed of with regular household waste. Proper disposal, recovery, and recycling must be ensured, and you are obligated to dispose of old devices and discharged batteries/accumulators at designated collection points.

c) Proper disposal contributes to conserving valuable resources and prevents potential harmful effects on public health and the environment that may result from improper disposal. Disposal is free of charge.

d) For more information on the recycling and recovery of old devices, batteries, and accumulators, contact your local municipality, the waste disposal company, or the point of sale where you purchased the product.